

# FIVE PET PLACE

## Window Bed Installation

### BEFORE YOU GET STARTED

Thank you for your purchase of a Five Pet Place Window Bed.

Before you begin the installation process, please take a few moments to do the following:

#### *Read The Product Manuals*

Please read the Window Bed and Window Bed Installation Manuals in their entirety prior to installation as each has unique information relevant to the comfort and safety of your cat plus the adoption and enjoyment of its bed.

#### *Dry Wall and Stud Mounting Only*

The supplied hardware is for drywall and stud mounting only. Your Window Bed *must* be installed into two correctly positioned wall studs. Otherwise, it may fall in the future.

#### *Concerning Large Dogs and Small Children*

Exercise proper judgment when installing a Five Pet Place Window Bed in homes with large dogs and small children as:

- ↳ an aggressive dog or curious child may pull a Window Bed off the wall while attempting to reach your cat
- ↳ a passing child's head may come into abrupt contact with the suspended Window Bed and cause injury

#### *Ask For Help*

Finally, to be safe during installation, ask a friend for help. In fact, if you've never picked up a screwdriver or drill before, this installation is going to require help from someone who has previously done projects like installing shelves in their home.

We hope you and your cat enjoy its Five Pet Place Window Bed for many years to come.

Sincerely,



Michael Ostrofsky  
Founder

## INSTALLATION OVERVIEW



The Five Pet Place Window Bed attaches to walls with a metal Wall Mounting Bracket secured with wood screws and toggle bolts. Wood screws are used where wall studs are present. Toggle anchors and bolts where they are not.

Once the Wall Mounting Bracket is securely in place, the Window Bed attaches to it via a metal Product Mounting Bracket on the back – creating a simple and elegant installation where all mounting hardware is hidden from view.

## INDEX TO INSTALLATION STEPS

- Review and Identify Supplied Installation Components
- Gather Required Installation Tools
- Find Location Containing Wall Studs
- Ensure Wall Mount Bracket is Level
- Mark Locations of Screws and Anchors
- Run Toggle Anchors Through Drywall
- Drive Screws Into Studs
- Drive Bolts Into Toggle Anchors
- Double Check Wall Mounting Bracket
- Place Window Bed on Wall
- Finishing Touches

## SUPPLIED INSTALLATION COMPONENTS



1. Wall Mounting Bracket with Bubble Vial
2. Two Metal and Plastic Toggle Anchors
3. Two 2-1/2" Phillips Bolts for Toggle Anchors (with flat ends)
4. Two 2" Phillips Wood Screws (with pointed ends)

## REQUIRED INSTALLATION TOOLS



1. Electronic Stud Finder
2. Pencil
3. #3 Phillips Screwdriver
4. Drill with #3 Phillips Drive plus 1/2" and 3/16" Drill Bits
5. Tape Measure

## FIND LOCATION CONTAINING WALL STUDS




Use the electronic stud finder to see if wall studs are under the drywall for where you want to put your Window Bed. Mark their location. Can't find any? Find a different mounting area.



Position Wall Mounting Bracket by placing upper edge 4-1/2" below where you want the cushion top to be. The top 2" of this area must be clear of all protruding window elements such as the casing.

If your Window Bed has an optional electronic heater, you may wish to center it over an electrical outlet so the cord may be plugged in as inconspicuously as possible.

## ENSURE WALL MOUNTING BRACKET IS LEVEL

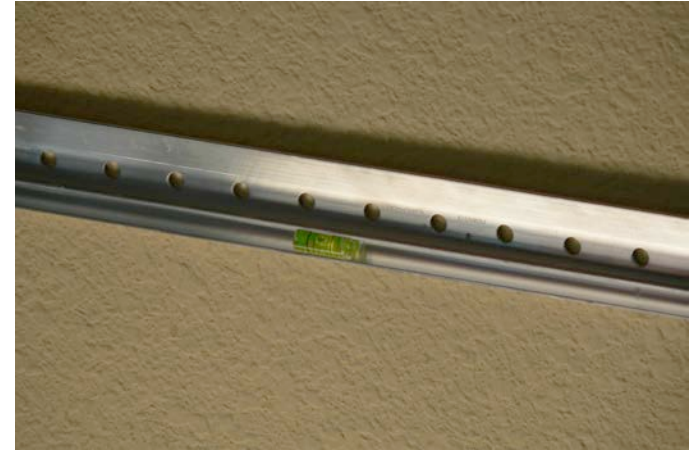

Place Bubble Vial in Wall Mounting Bracket's built in track if not there. Once in the track, slid it toward the middle. Hold the Wall Mounting Bracket against wall with track and Bubble Vial on bottom. Center bubble between lines on vial.

## MARK LOCATIONS OF SCREWS AND ANCHORS



Color in screw holes over any wall studs. Your location must have two wall studs. One should be toward the left of the bracket and one toward the right. Both can not be toward one side. Color in one or two more locations for toggle anchors.

## RUN TOGGLE ANCHORS THROUGH DRYWALL



Set Wall Mounting Bracket aside. With 1/2" bit, drill through drywall where toggle anchors are to be installed. Run toggle anchor's metal channel and plastic straps into each hole, then pull back until channel is flat. Slide plastic cap along straps until flush with wall. Snap off straps. A toggle installation video is at: <http://www.toggler.com/products/snaptoggle/installation.php>

## DRIVE SCREWS INTO STUDS



Find pencil marks over studs. With 3/16" bit, drill pilot holes through them into drywall and studs. Place Wall Mounting Bracket over holes and toggle anchors. Take a 2" screw and with drill and #3 Phillips bit, drive it through the Wall Mounting Bracket into your pilot hole until flush. Repeat with other studs.

## DRIVE BOLTS INTO TOGGLE ANCHORS



Take your 2-1/2" bolts and thread them through the Wall Mounting Bracket and into the toggle anchors. Then, with your screwdriver or drill, finish tightening the bolts until they're tight and flush with the Wall Mounting Bracket.

## DOUBLE CHECK WALL MOUNTING BRACKET



Ensure all screws and anchors are tightly secured. Ensure Wall Mounting Bracket is firmly in place. Remove the bubble vial. If any items are loose or the drywall is damaged, your Window Bed installation can not be safely completed.



## PLACE WINDOW BED ON WALL



Take Window Bed and place back flat against wall. Position so Product Mounting Bracket is slightly above Wall Mounting Bracket.



Keeping the Window Bed level, slide it down until its Product Mounting Bracket sets into the Wall Mounting Bracket you just installed. Be patient as this may take several attempts.

When letting go, watch to see if the Window Bed moves forward and away from the wall. If the Window Bed doesn't move – it is properly set.



Once you're sure the Window Bed is properly set into its Wall Mounting Bracket, seat it further by firmly tapping down the back of the bed frame with your fingers. Do not push down across the front of the Window Bed.

## FINISHING TOUCHES



If the Window Bed's cushion was removed during installation, make sure the embroidered 5 is visible in the upper right hand corner when you put it back.



If equipped with an optional electronic heater, thread its power cord down through the Window Bed's access port. It can be found by looking underneath the Bed Cushion.

Finally, give your cat a few hours to find its new bed on its own as it might be nervous from any guests who helped with the installation or noise caused by the drill. Thank you and enjoy.

### WARNING

NOT FOR USE BY HUMANS OR NEWBORN, NURSING, INCAPACITATED, BEDRIDDEN OR ANIMALS AND ANIMALS PRONE TO CHEW.

WHEN EQUIPPED WITH HEATER EXERCISE CAUTION DUE TO RISK OF ELECTRICAL SHOCK OR FIRE. UNPLUG AND DISCARD HEATER IF POWER CORD IS DAMAGED.

WINDOW BED CAN FAIL, CAUSING POSSIBLE DAMAGE AND/OR INJURY, WHEN IMPROPERLY INSTALLED, OVERLOADED OR USED IN ANY MANNER OTHER THAN ORIGINALLY INTENDED.

INDOOR USE ONLY.

## FIVE PET PLACE

Post Office Box 3285  
Mission San Jose, CA 94539-0328

1-510-790-2637 Phone  
1-484-222-7137 eFax

©2012 Five Pet Place. All rights reserved.